

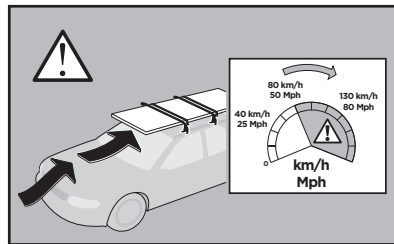


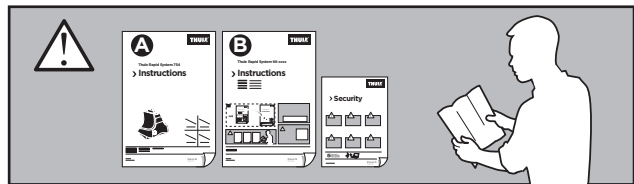

## Thule Rapid System Kit 1467

# > Instructions

RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-

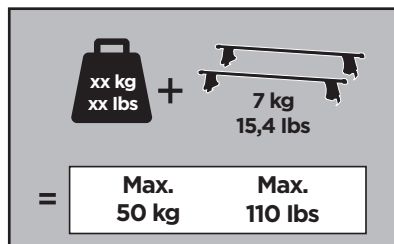

ISO 11154-E

141467

C.20130625  
519-1467-01


Bring your life  
thule.com



65 x2



178 x2




927 x2



928 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-	31,5	966	38

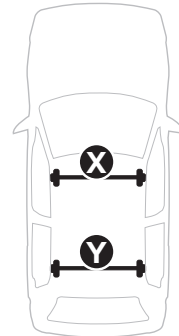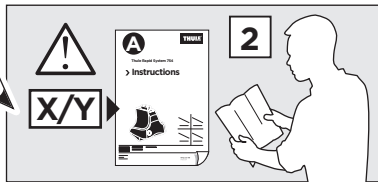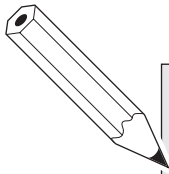


	Y (scale)	Y (mm)	Y (inch)
RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-	27	921	36 1/4

**2**

**RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-**

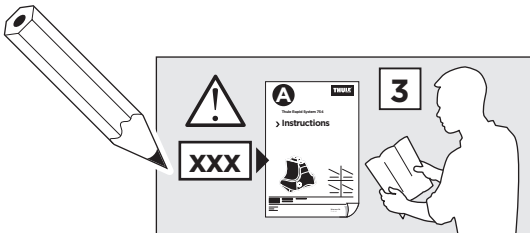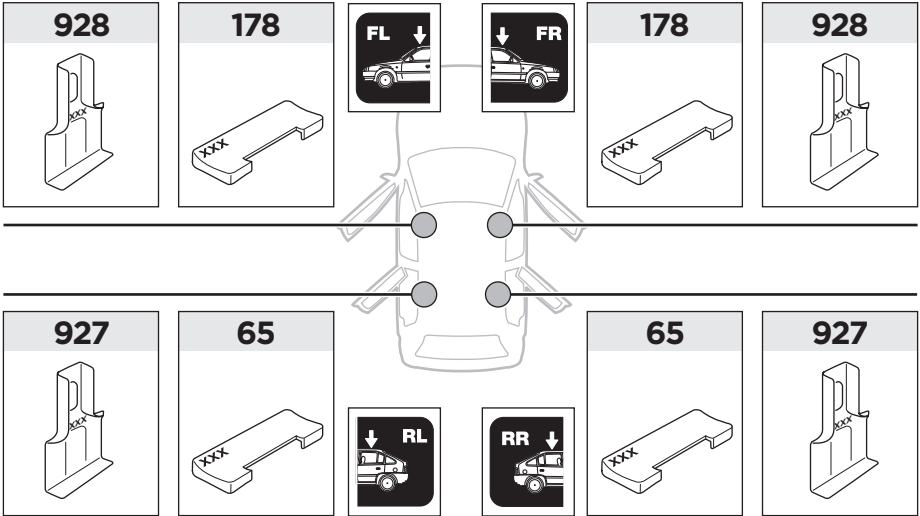

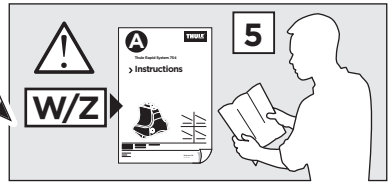**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-</b>	<b>226</b>	<b>650</b>	<b>8 <sup>7</sup>/<sub>8</sub></b>	<b>25 <sup>5</sup>/<sub>8</sub></b>

