

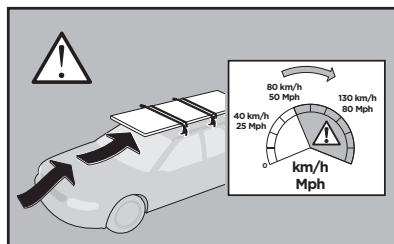


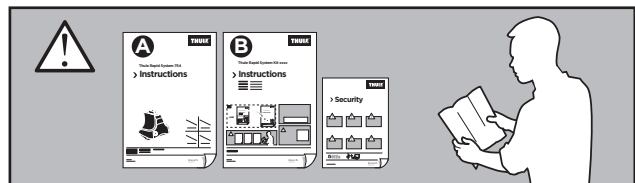

## Thule Rapid System Kit 1778

# > Instructions






VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-

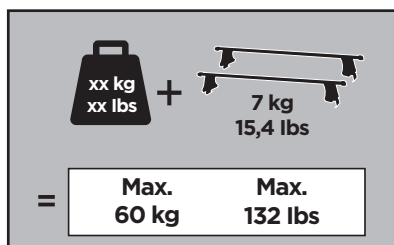

ISO 11154-E



141778  
C.20150304  
519-1778-01

Bring your life  
thule.com

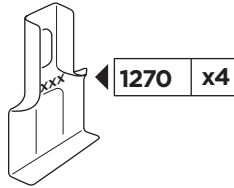

1


	X (scale)	X (mm)	X (inch)
<b>VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-</b>	<b>44,5</b>	<b>1096</b>	<b>43 1/8</b>

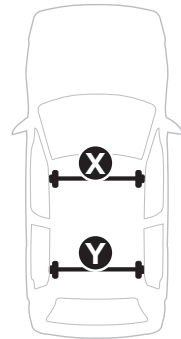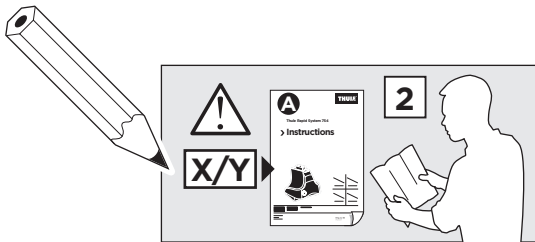


	Y (scale)	Y (mm)	Y (inch)
<b>VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-</b>	<b>41</b>	<b>1061</b>	<b>41 3/4</b>

2

VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-

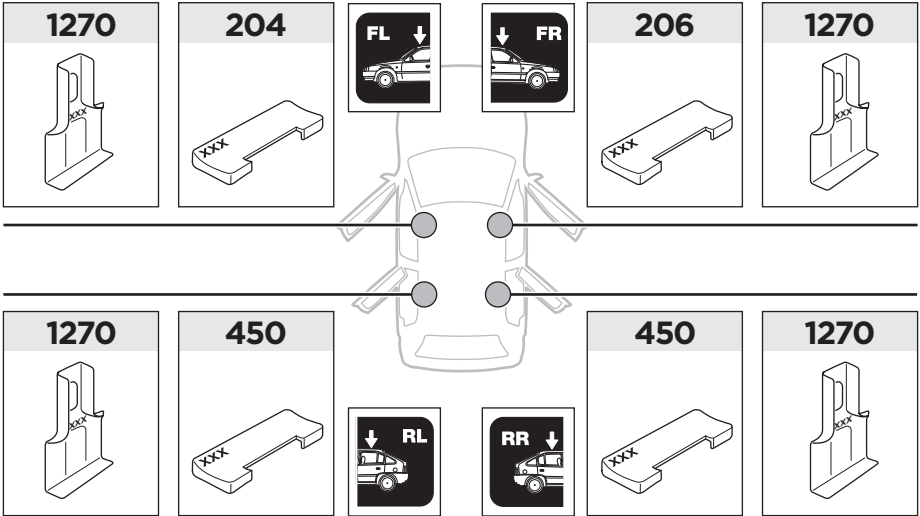

**3**

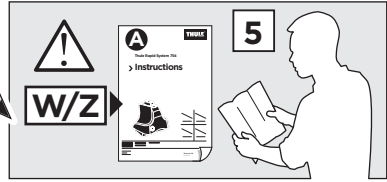

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-</b>	<b>160</b>	<b>780</b>	<b>6 1/4</b>	<b>30 3/4</b>

